

TRIANIUM


Liquid Screen Protector




WARNING

The drying process will take up to 10 hours. We recommend doing this overnight. Please allow enough time for the protector to dry before using for best results.

Instructions

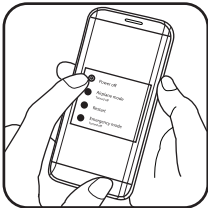


1. Turn OFF the device, and ensure you are working in a clean environment.

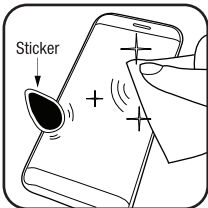

2. Wipe the device's screen totally clean with the included dust remover (sticker) and dry wipe.




3. Shake the included spray-bottle, and then spray both sides of the screen protector and also your finger tips.

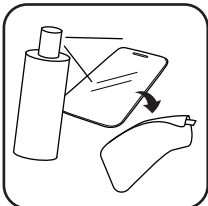


4. Peel off the protective layer (tab 1) of the screen protector and then spray the "sticky" side of the screen protector with the included liquid.


TRIANIUM

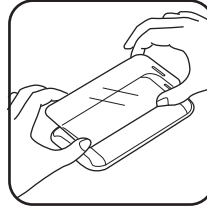


5. Carefully align the screen protector to the device's screen. Make sure that any holes and edges line up.

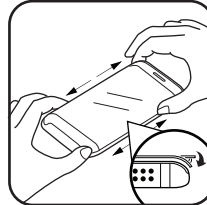


6. Ensure that the curved edges of the screen are perfectly aligned with the screen protector. (Be aware, it is OK if the edges of the screen protector do not adhere to the curved screen at this point)

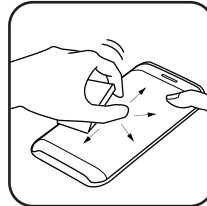

7. While holding the screen protector in place, use the squeegee to push out any remaining water between the screen and protector. Ensure all air bubbles and most liquid have been removed. (Re-align the protector if needed)

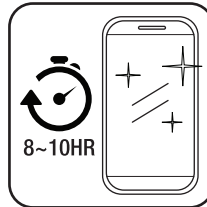

8. Wait between 8~10 hours for the protector to dry and stick in place. Do not attempt to attach the screen protector to the edges of the device until after at least 8 hours.

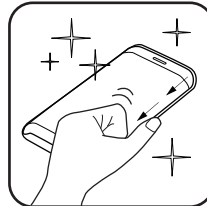

9. Now that the screen protector is completely dry, gently push the edges of the protector down to completely cover all the edges of the device. (Note: Please wait an additional 2 hours before using the device.)



For detailed video instructions on how to install this protector, go to: trianium.com/screen-protector/

For any additional questions, contact us at: trianium2014@gmail.com